


TreeMat

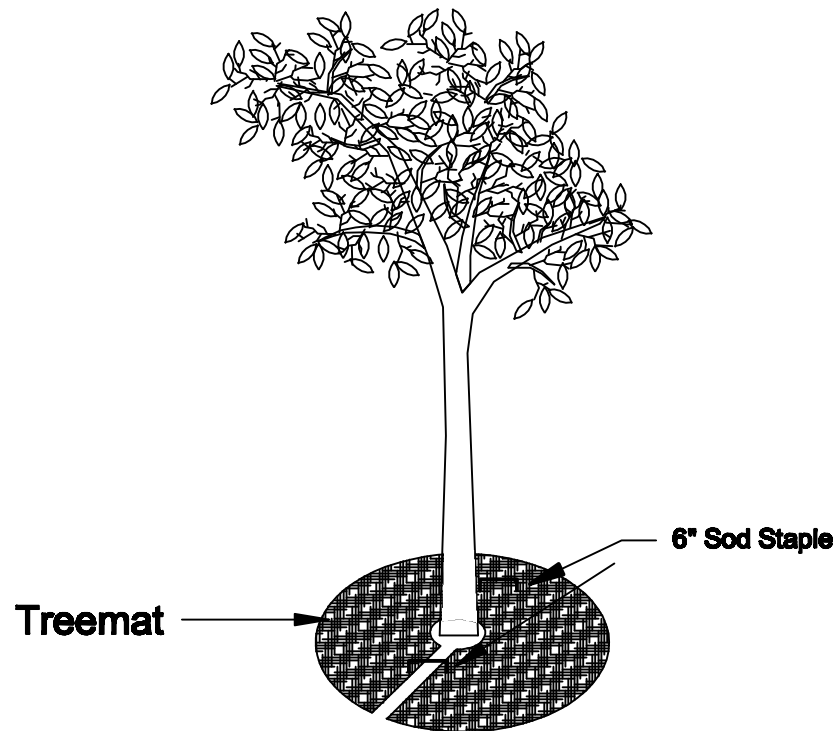

INSTALLATION GUIDELINES:

- 1. PLANT TREE ACCORDING TO STANDARD SPECIFICATIONS.**
- 2. GRUB ALL GRASS IN AREA WHERE TREEMAT WILL BE PLACED.**
- 3. PLACE TREEMAT AROUND TREE AND SECURE WITH SOD STAPLES.**
- 4. IF INSTALLING ON STEEP SLOPE, ADDITIONAL STAPLES MAY BE NEEDED.**

PRODUCT NOTES:

- 1. TREEMAT MUST BE COMPOSED OF 100% BIODEGRADABLE, MACHINE-COMPRESSED COIR FIBER WITH 100% BIODEGRADABLE NATURAL LATEX COATING ON ONE SIDE.**
- 2. TREEMAT MUST HAVE A CENTER OPENING AND RADIAL SLIT.**
- 3. TREEMAT MUST BE A MINIMUM OF 1/2" THICK.**

RECOMMENDED SIZING:

- 12" TREEMAT - FOR USE WITH TUBELINGS AND BARE ROOT MATERIAL**
16"-24" TREEMAT - 1 GALLON AND 3 GALLON CONTAINERIZED TREES/SHRUBS
30" TREEMAT - 5 GALLON CONTAINERS OR 1 INCH CALIPER TREES
36" TREEMAT - 2 INCH CALIPER TREES

Available from: EcoDepot, LLC, 1405 Benson Court, Suite D, Arbutus, MD 21227
P: 443-304-3317 F: 443-304-3315 www.ecodepotsales.com info@ecodepotsales.com